 



Channel Bin Rear Panel

Channel Insert Sends

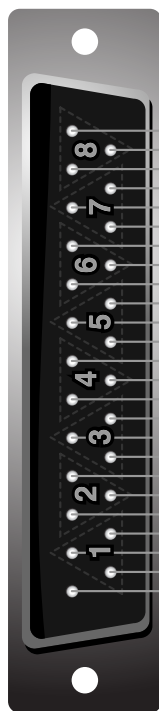


Pin #	Connection	Cable #
1	Snd +8	8
14	Snd -8	
2	0V	7
15	Snd +7	
3	Snd -7	
16	0V	
4	Snd +6	6
17	Snd -6	
5	0V	
18	Snd +5	5
6	Snd -5	
19	0V	
7	Snd +4	4
20	Snd -4	
8	0V	
21	Snd +3	3
9	Snd -3	
22	0V	
10	Snd +2	2
23	Snd -2	
11	0V	
24	Snd +1	1
12	Snd -1	
25	0V	
13	Chassis	

 DAW Inputs

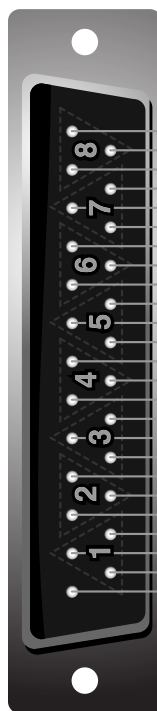


Pin #	Connection	Cable #
1	DAW +8	8
14	DAW -8	
2	0V	7
15	DAW +7	
3	DAW -7	
16	0V	
4	DAW +6	6
17	DAW -6	
5	0V	
18	DAW +5	5
6	DAW -5	
19	0V	
7	DAW +4	4
20	DAW -4	
8	0V	
21	DAW +3	3
9	DAW -3	
22	0V	
10	DAW +2	2
23	DAW -2	
11	0V	
24	DAW +1	1
12	DAW -1	
25	0V	
13	Chassis	

 Channel Insert Returns

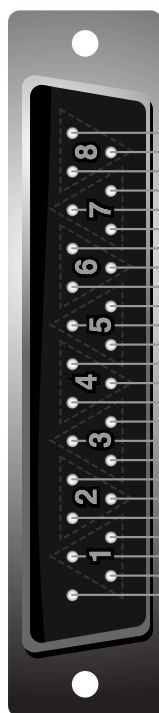


Pin #	Connection	Cable #
1	Ret +8	8
14	Ret -8	
2	0V	7
15	Ret +7	
3	Ret -7	
16	0V	
4	Ret +6	6
17	Ret -6	
5	0V	
18	Ret +5	5
6	Ret -5	
19	0V	
7	Ret +4	4
20	Ret -4	
8	0V	
21	Ret +3	3
9	Ret -3	
22	0V	
10	Ret +2	2
23	Ret -2	
11	0V	
24	Ret +1	1
12	Ret -1	
25	0V	
13	Chassis	

 Line Inputs

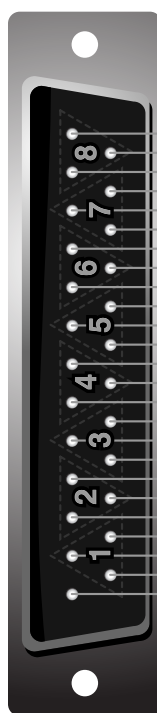

Pin #	Connection	Cable #
1	Line +8	8
14	Line -8	
2	0V	7
15	Line +7	
3	Line -7	
16	0V	
4	Line +6	6
17	Line -6	
5	0V	
18	Line +5	5
6	Line -5	
19	0V	
7	Line +4	4
20	Line -4	
8	0V	
21	Line +3	3
9	Line -3	
22	0V	
10	Line +2	2
23	Line -2	
11	0V	
24	Line +1	1
12	Line -1	
25	0V	
13	Chassis	

 Direct Outputs

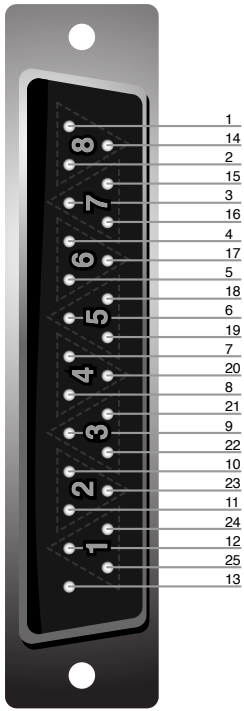

Pin #	Connection	Cable #
1	DIR +8	8
14	DIR -8	
2	0V	
15	DIR +7	7
3	DIR -7	
16	0V	
4	DIR +6	6
17	DIR -6	
5	0V	
18	DIR +5	5
6	DIR -5	
19	0V	
7	DIR +4	4
20	DIR -4	
8	0V	
21	DIR +3	3
9	DIR -3	
22	0V	
10	DIR +2	2
23	DIR -2	
11	0V	
24	DIR +1	1
12	DIR -1	
25	0V	
13	Chassis	